


INSTALLING SD CARDS

3G Forward & Dual-Facing Cameras

- **Step 1:** Power down camera completely until all LED lights are off.
- **Step 2:** Loosen the screw and clip on the back of the mount, and safely remove the camera.
- **Step 3:** Open the access door located on the top right side of the power cable
- **Step 4:** Press down lightly on the top of the card until you hear a click, which will then release the SD card from the spring lock
- **Step 5:** Proceed to pull the SD card out of the slot (To prevent damage to the SD card, use caution when removing from the SD slot – Damage to SD cards will resort in loss of data)

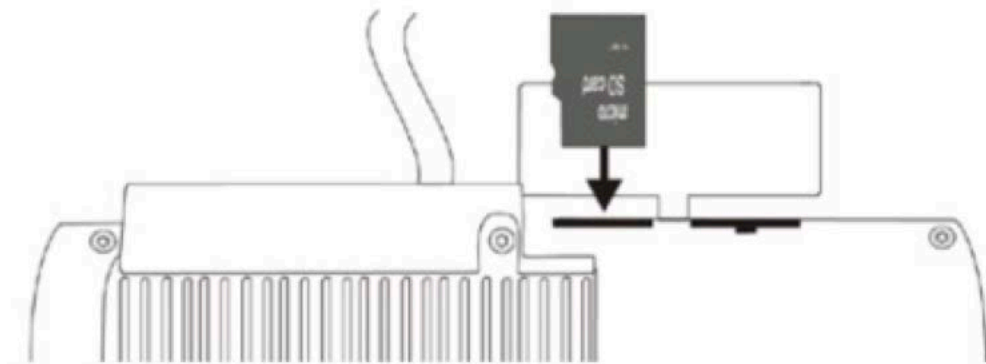

Inserting the Micro SD card

It is recommended that you only use the Micro SD card supplied with the 3G Forward-Facing or 3G Dual-Facing Camera, a class 10 card. We can take no responsibility for the unit if a different card is used in the device. The Micro SD card is installed in the device in the left hand side of the unit as shown in the above image. The Micro SD must only be installed with the writing facing outwards.

For all other questions regarding issues with camera, please reach out to Customer Support or your Account Rep.